
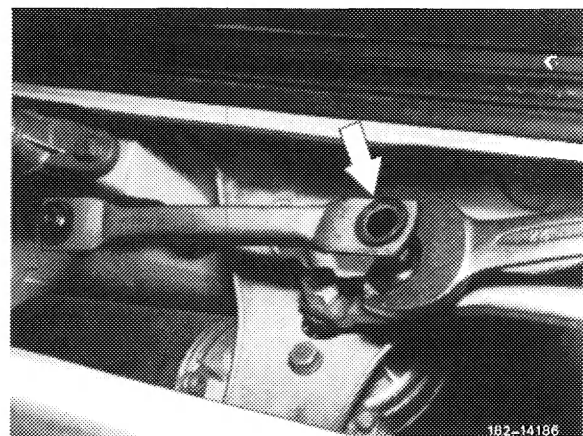
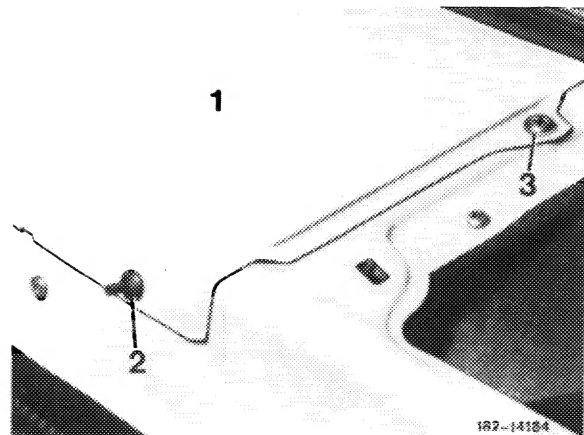



### Removal

---


- 1 Remove wiper arms (82-610).
- 2 Remove ornamental grille on air intake, right (83-140).
- 3 Remove covering cap (1) and the nut of bearing shaft left and right located underneath. Remove ornamental grille at air intake left after removing the 4 expanding rivets.
- 4 Remove cover (1), center. Remove 4 expanding rivets (2). Remove one Phillips head screw (3) each at left and right of cover.
- 5 Pull connecting rod left and right from wiper motor crank.

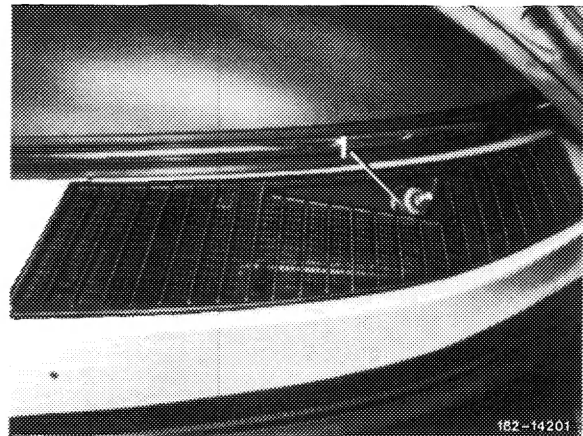


6 Remove water drain from righthand bearing shaft.

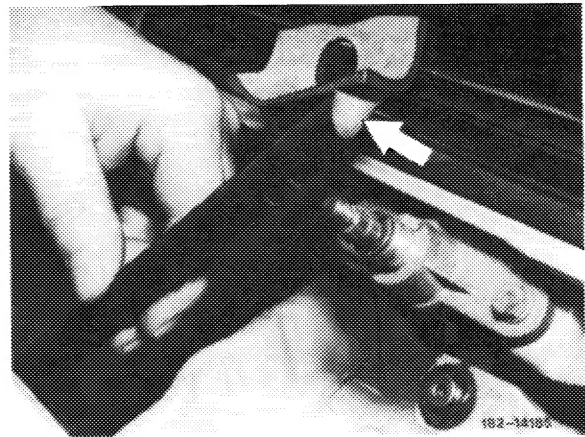


7 Pull off coupler (accessible from engine compartment).

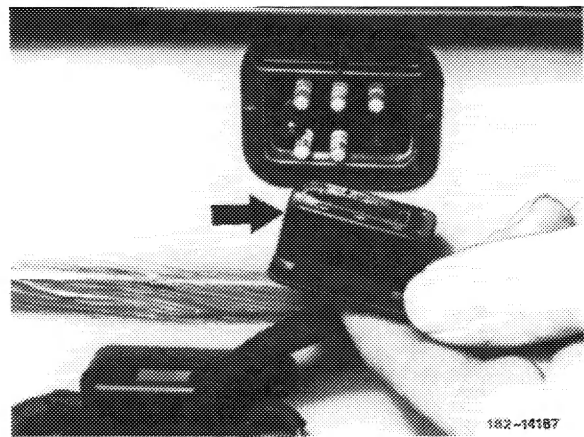

8 Unclip plug from direction of fresh air chamber (arrow) and pull through front wall.

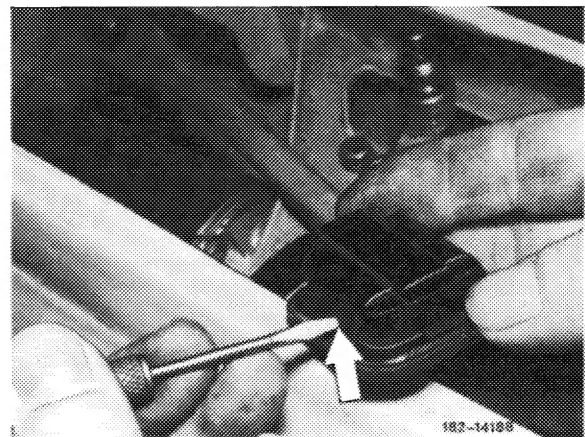

9 Remove fastening screws (1) of wiper motor.

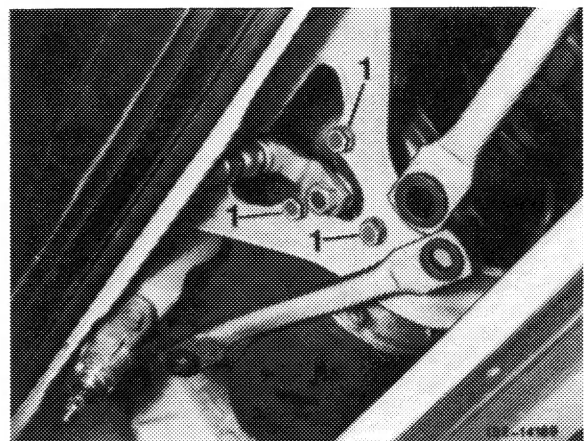

10 Remove wiper motor toward the right.

### Installation

---

11 For installation proceed vice versa.

